



WIRING DIAGRAMS

FIAT SPIDER 124 TYPE BS (1969 - 1973)

The diagrams in this document are entirely vector-based. This means that they can be scaled to virtually any size and printed from computers that run Adobe Acrobat. This includes Windows, Macintosh, UNIX, and Linux. The quality of the images will not degrade upon scaling and the file format is supported by most office printing facilities (such as Kinko's). The drawings have been printed as large as 60 inches tall (5 feet) by the author on a Hewlett-Packard Designjet plotter with fantastic results.


If you find errors in these documents or wish to provide comments please email brad@artigue.com. This document was released in October of 2006.

Mirafiori is a FIAT enthusiast resource and online forum that has been operating since 1993. <http://www.mirafiori.com>

The online home for this document is at <http://www.artigue.com/fiat>.



Component	Description
1	Front direction Indicators.
2	Front parking lights
3	Headlamps (high and low beams)
4	Motorcompressor for electropneumatic horns
5	Horn control relay switch
6	Engine cooling fan motor
7	Ignition coil.
8	Oil Pressure Gauge sending unit
9	Ignition Distributor
10	Spark plugs
11	Alternator
12	Engine fan motor thermostatic switch
13	Front side marker lamps
14	Heat gauge thermostatic switch
15	Insufficient Oil Pressure indicator sending unit
16	Engine compartment lamps
17	Heat gauge additional resistor
18	Heat Gauge sending unit
19	Battery charge Indicator relay.
20	Voltage regulator
21	Button switch for electrovalve energizing during fast idle rate adjustments.
22	Engine fan motor relay switch
23	Battery charge indicator relay.
24	Starter Motor
25	Engine compartment lamps jam switch.
26	Electrovalve, exhaust emission control device
27	Fuses
28	Switch on clutch pedal for exhaust emission control electropneumatic system
29	Inspection lamp receptacle
30	Stop lights switch
31	Switch, on the hydraulic circuit, for indicator 57.
32	Flasher, direction indicators.
33	Windshield washer motor button switch
34	Electric pump, windshield washer.
35	Windshield wiper motor.
36	Windshield wiper Intermittent operation cycling switch unit.
37	Flasher, indicator 57.

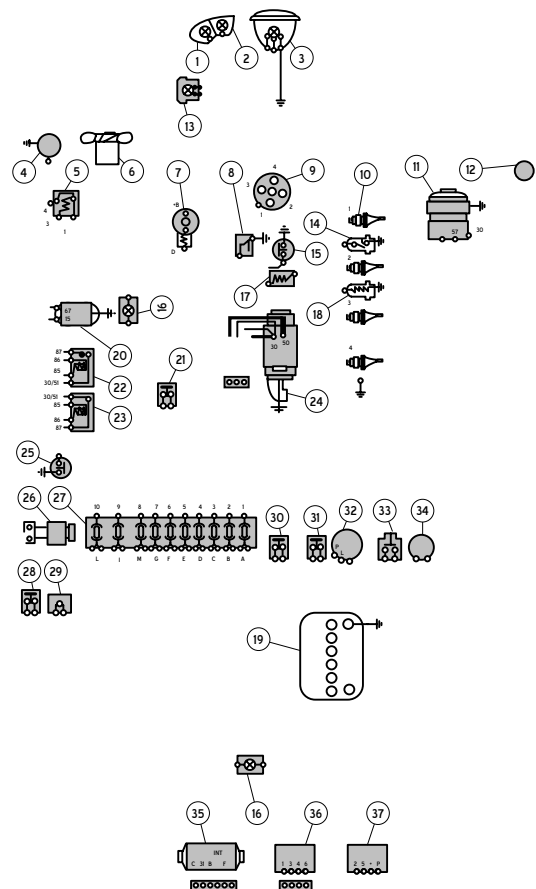

Component	Description
38	Outer lighting 2 position switch
39	Fuel Gauge
40	Fuel Reserve Indicator
41	Fuel Gauge Light
42	Parking lights Indicator (green).
43	Directional signal arrow tell tale (green).
44	Speedometer light
45	Headlamp high beam Indicator (blue)
46	Insufficient oil pressure Indicator (red).
47	Oil pressure gauge light
48	Oil pressure gauge
49	Battery charge indicator (red).
50	Engine tachometer light.
51	Engine tachometer.
52	Engine water heat gauge.
53	Engine water heat gauge light.
54	Clock.
55	Clock light.
56	Windshield wiper high end low sweep rate control.
57	Brake system effectiveness and hand brake ON indicator (red).
58	Remove key Indicator
59	Vehicular hazard warning signal indicator.
60	Panel light rheostatic switch.
61	Jam switch, on left door pillar, for Indicator 58
62	Separate 3 Amp fuse for indicator 58 and its switch.
63	Lock switch.
64	Jam switches, between doors and pillars, for courtesy lights.
65	Headlamp high-low beam change-over and low beam flashes switch.
66	Direction Indicators switch.
67	Windshield wiper control three-position switch.
68	Electropneumatic horn control button.
69	Electrofan 3-position switch.
70	Electric cigarette lighter (with housing Indicator).
71	Vehicular hazard warning signal switch.
72	Courtesy light, with Incorporated switch.
73	Electrofan motor, two speed.
74	Switch, on transmission (3rd and 4th gears) for exhaust emission control electropneumatic system.
75	Fuel gauge sending unit.
76	Luggage compartment lamp jam switch.
77	Back-up light switch
78	Switch, on hand brake lever, for indicator 57.
79	Luggage compartment lamp.
80	Rear side marker lamps.
81	Rear direction indicators.
82	Rear stop lights.
83	Rear parking lights.
84	Back-up lights.
85	Number plate lights.

